



Espaciador con fijación

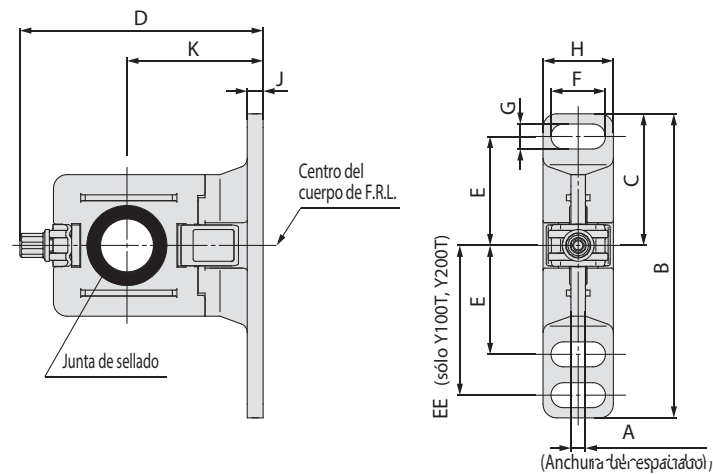

Modelo	A	B	C	D	E	EE	F	G	H	J	K	Modelo aplicable
Y100T-A	6	56	24.5	43.6	20	27	6.8	4.5	13	3	25	AC10 □-A
Y200T-A	3.2	67	29	53.4	24	33	12	5.5	15.5	3.5	30	AC20 □-A
Y300T-A	4.2	82	41	71.5	35	—	14	7	19	4	41	AC25 □-A, AC30 □-A
Y400T-A	5.2	96	48	86.1	40	—	18	9	26	5	50	AC40 □-A
Y500T-A	5.2	96	48	89.6	40	—	18	9	26	5	50	AC40 □-06-A

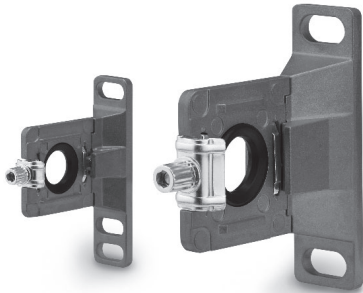

Y200T-A

Y400T-A

Lista de repuestos

Descripción	Material	Ref.				
		Y100T-A	Y200T-A	Y300T-A	Y400T-A	Y500T-A
Junta de sellado	HNBR (NBR) Nota 1)	Y120P-050AS Nota 2)	Y220P-050S	Y320P-050S	Y420P-050S	Y520P-050S

Nota 1) ():Tamaño 10
Nota 2) Ensamble de 2 anillos.